

Instruction: INST-SLV1
Effective: 5/2004
Expiration: 5/2014

WARNINGS

To the receiver, contractor, store manager, safety director, supervisor, buyer, and anyone other than the ultimate equipment users:
These instructions are not to be removed except by the user of this equipment. Current instructions always must be available to any potential user.

Note: Because of continual developments in the application and use of SM/RTC equipment, and because of our desire to best serve your interests, these instructions are invalid 10 years after the effective date on these instructions. If these instructions are out of date, call SM/RTC Customer Service and request current instructions.

If you have any questions or need additional explanation or clarification about the use of any SM/RTC equipment, call SM/RTC Customer Service at 800-323-7402 (U.S. and Canada) or 847-358-2000 in Illinois or outside the Continental United States.

You must read and fully understand or have the following instructions explained to you before using this equipment. Failure to do so could result in serious or fatal injury.

Atencion: Si usted no puede leer el ingles o si usted no comprende estas instrucciones, favor de consultar su director de seguridad o su supervisor.

Attention: Si vous ne pouvez pas lire l'anglais ou si vous ne comprenez pas les instructions, consultez votre directeur de securite ou votre superviseur.

Achtung: Wenn Sie nicht Englisch lesen können und diese Anweisungen nicht verstehen, dann fragen Sie bitte Ihren Sicherheitsdirektor oder Ihren Aufseher.

Attenzione: Se non leggete l'inglese o non capite queste istruzioni, per favore rivolgete Vi al Vostro Direttore, responsabile della "Sicurezza sul Lavoro" o al Vostro diretto superiore.

You assume complete liability if you fail to follow these instructions and are injured. Use this equipment only as instructed.

Warning!


No other applications or methods of use are allowed without prior written approval.

1.0 Approved Application

The Sellstrom/RTC cotton lanyard cover provides limited protection for lanyards from heat and abrasion. The cotton fabric has been treated for flame resistance. The cover does not provide extraordinary protection. The cover is a lanyard accessory and must be used with a shock-absorbing lanyard. It does not provide fall protection. It does not interfere with the shock absorbing properties of the lanyard. Do not use the cover as a lanyard by itself.

2.0 Attachment to Lanyard

1. Read and understand the lanyard instructions provided by the manufacturer before using this product.
2. Remove the cover and inspect the lanyard as instructed in the lanyard instructions before each use. The cover does not offer extraordinary protection of the lanyard. Inspect the cover before each use as described below.
3. Slide cover over the lanyard to be used.
4. Attach the cover to the lanyard with the snaps provided, through the hole in the snaphooks as shown below.

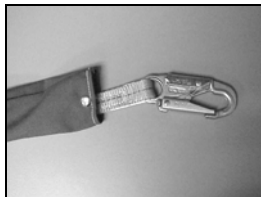

Step 1



Step 2



Step 3

3.0 Inspection

Remove the cover and inspect lanyard as instructed in the lanyard instructions provided by the manufacturer before each use. The lanyard may become damaged beneath the cover. Because the cover does not offer unlimited protection, spatter may have entered under the cover, high temperatures may have damaged the lanyard material, or other physical damage may have occurred. Inspect the cover before each use for cuts, tears, burns, holes, or any other damage.

Warning!

If damage is found or you have questions or any doubts about the equipment's condition, do not use the equipment. Tag the system "DO NOT USE" and contact SM/RTC Customer Service for advice.

4.0 Maintenance

If the cover becomes heavily soiled, it may be laundered with soap and water in any standard washer/dryer. Flame resistant properties usually last 25 – 50 laundering cycles. It is recommended to replace the cover after 50 laundering cycles.

Store in a cool, dry place.